


DALY 16S BMS Wiring Tutorial

Official DALY Electronics wiring tutorial page capture.

Source: <https://www.dalybms.com/16s-bms-wiring-tutorial/>

The following pages are the original tutorial images published by DALY.


16S wiring tutorial page 1


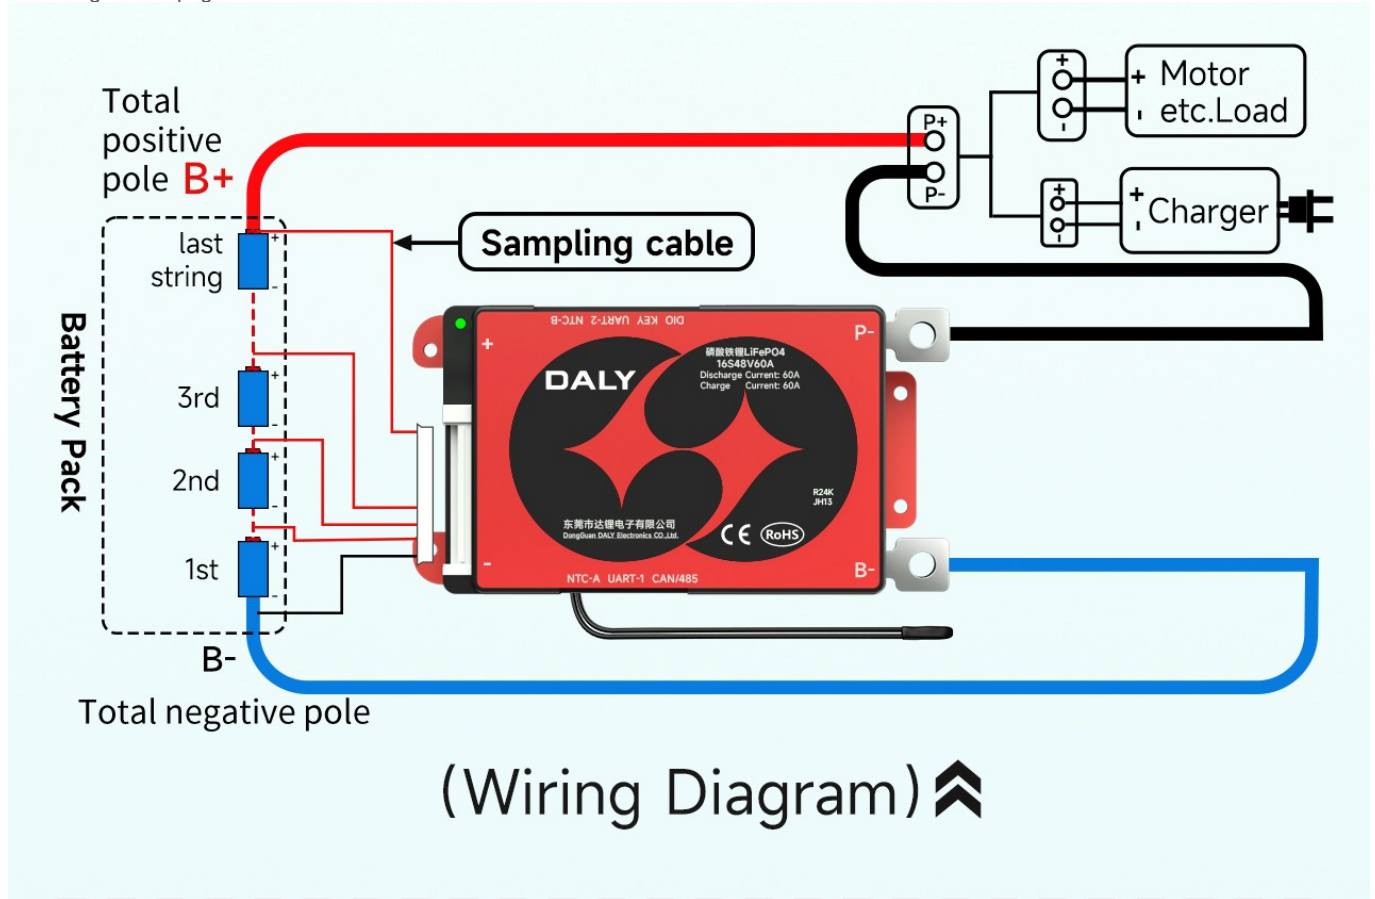






Be careful not to insert the BMS
when soldering the cable

16 strings of 17 PIN cable

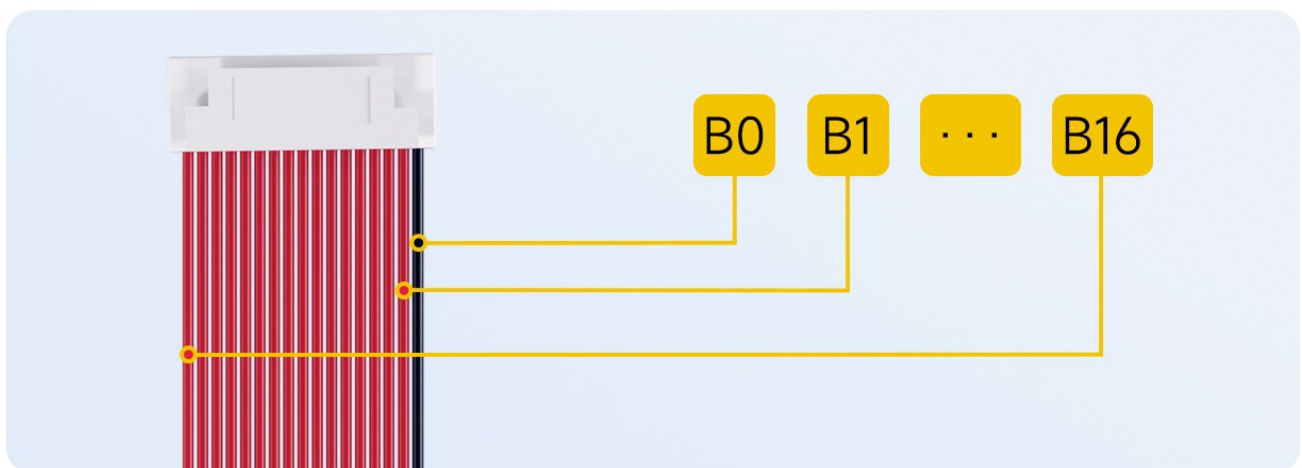

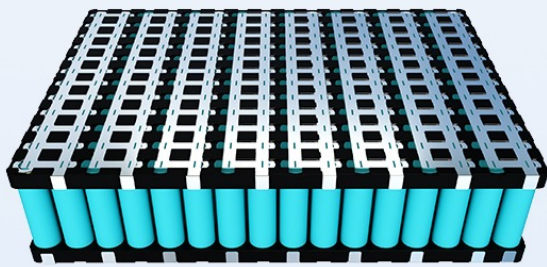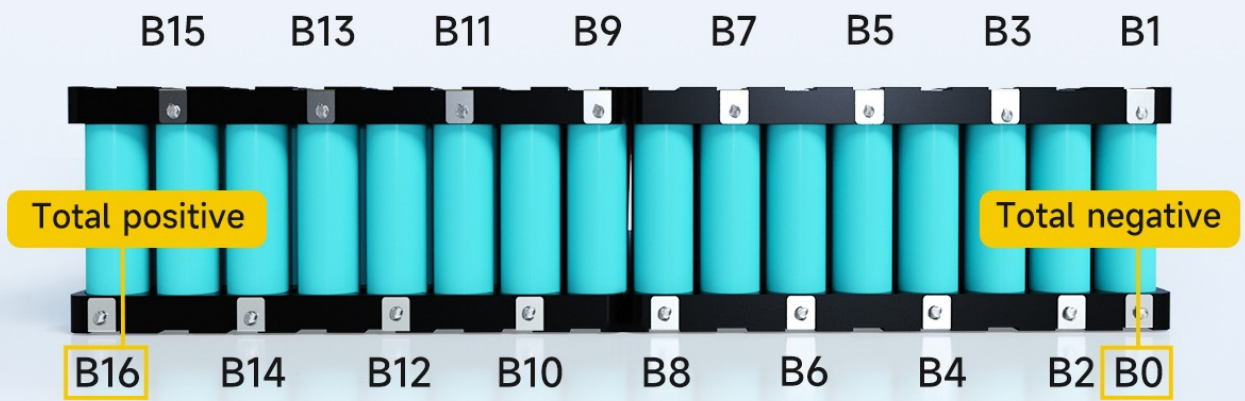

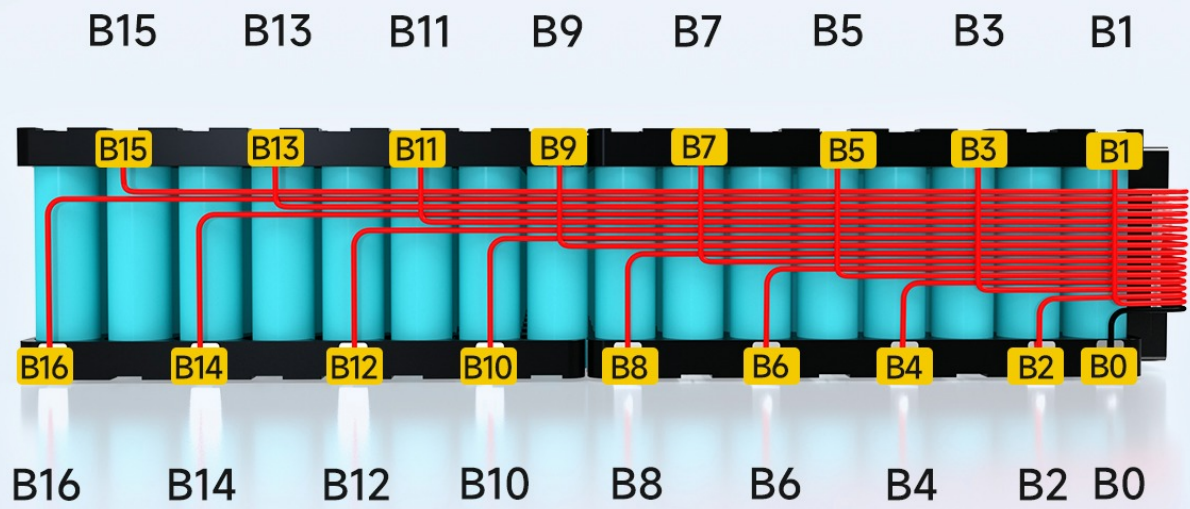

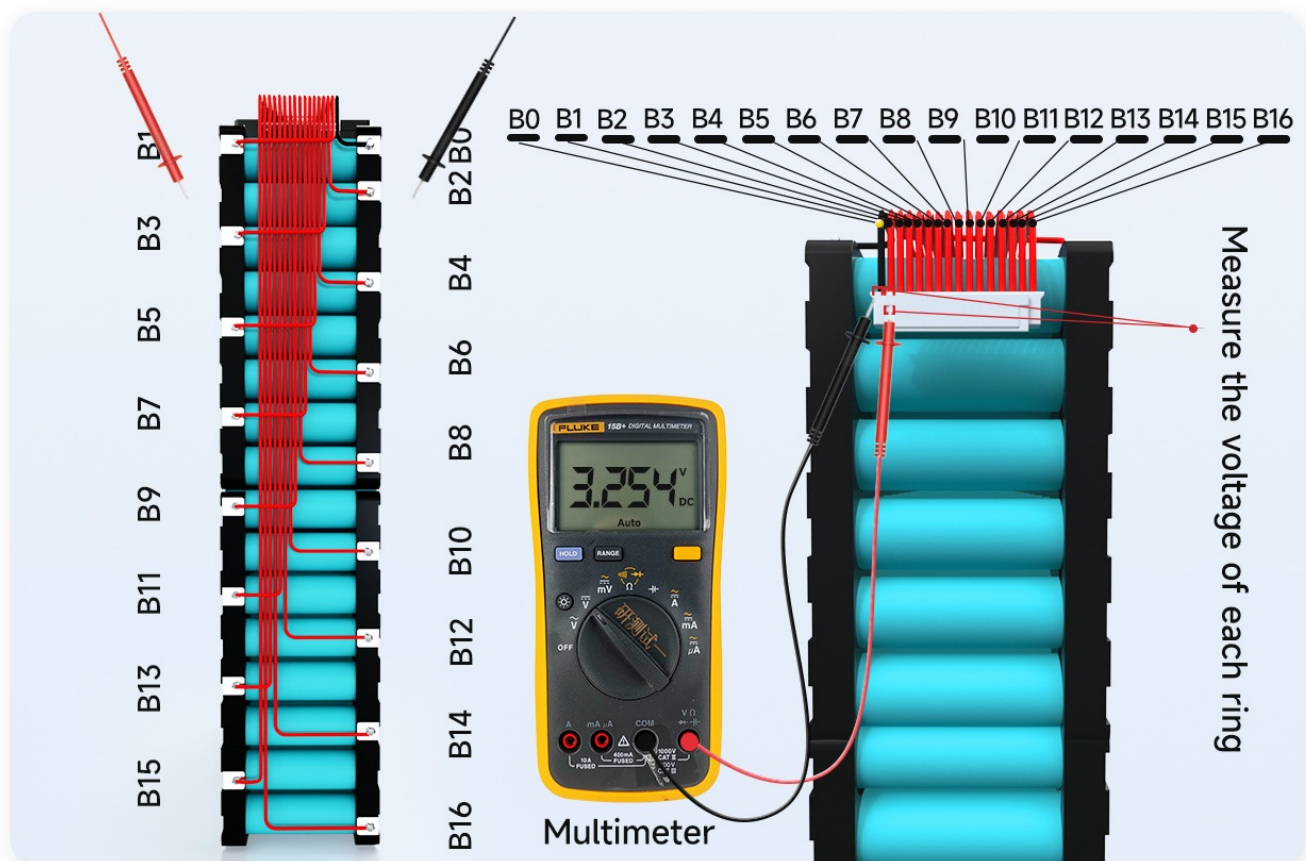

▲ Battery pack voltage

B0、B1

B1、B2

B15、B16

=

=

=

.....

=

▲ Cable voltage

B0、B1

B1、B2

B15、B16



