


DALY 12S Smart BMS Wiring Tutorial

Official DALY Electronics wiring tutorial page capture.

Source: <https://www.dalybms.com/12s-bms-wiring-tutorial/>

The following pages are the original tutorial images published by DALY.



12S wiring tutorial page 1



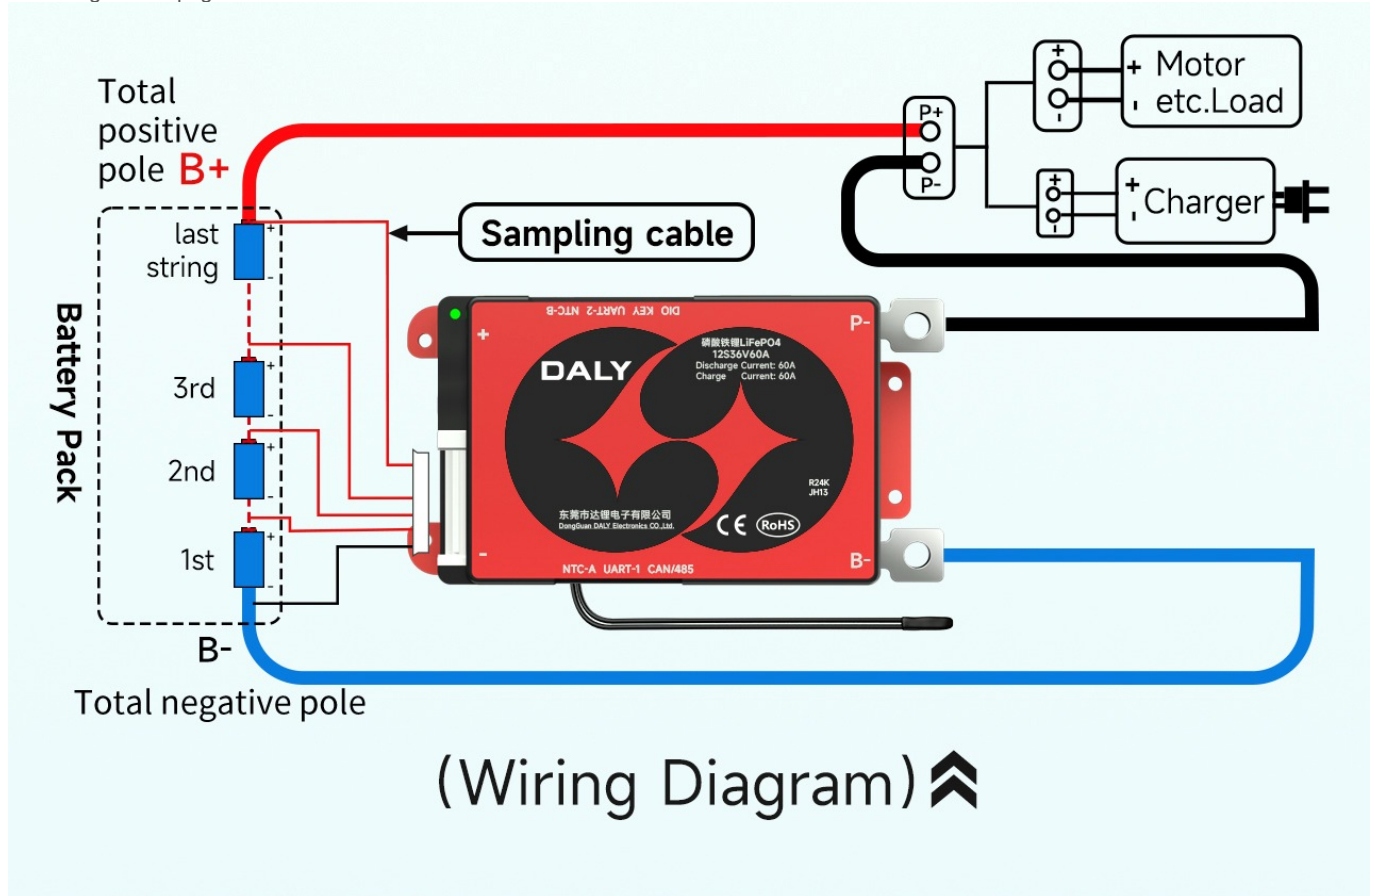






Be careful not to insert the BMS
when soldering the cable

12 strings of 13 PIN cable

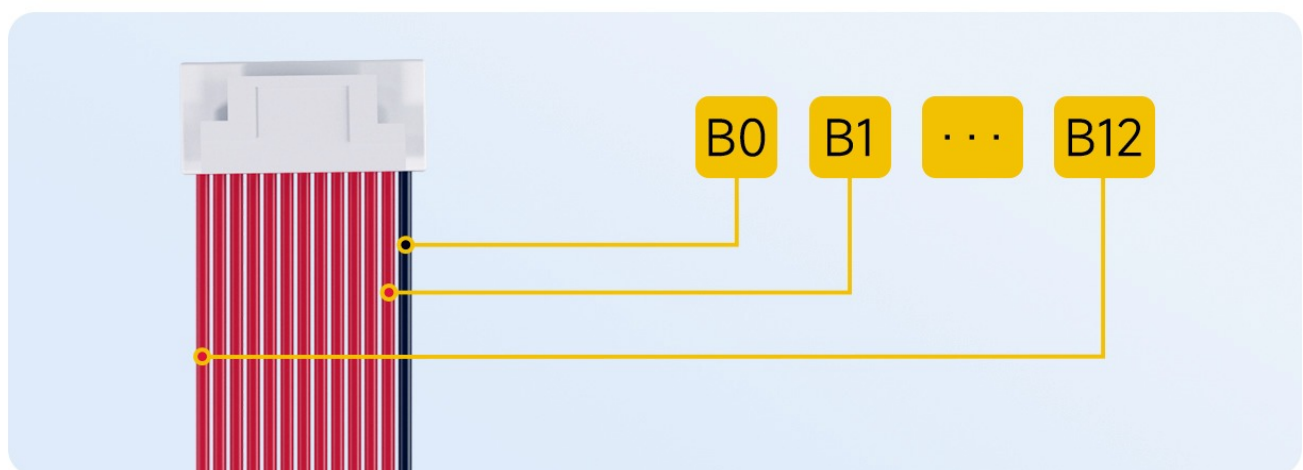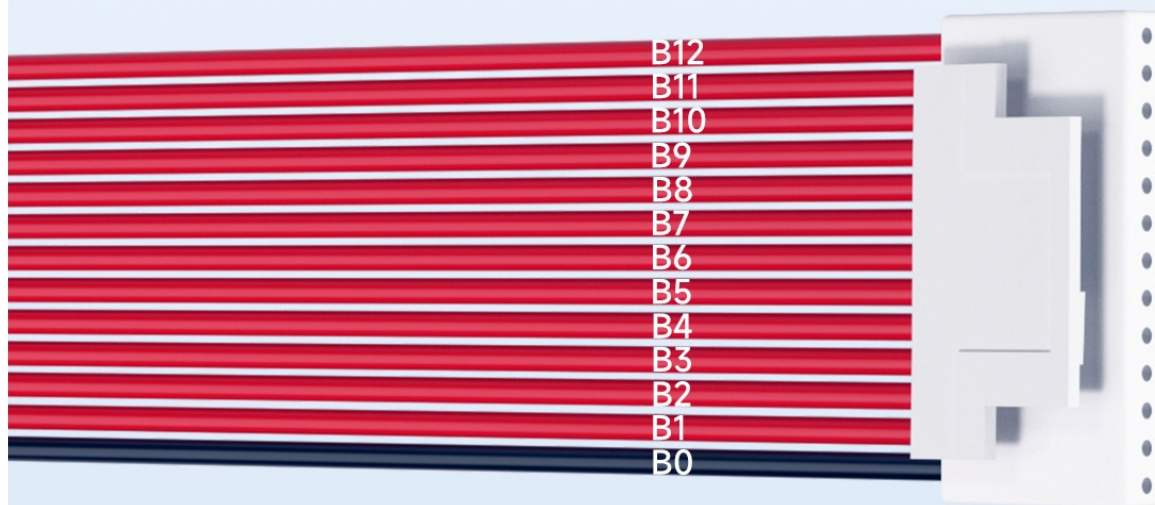

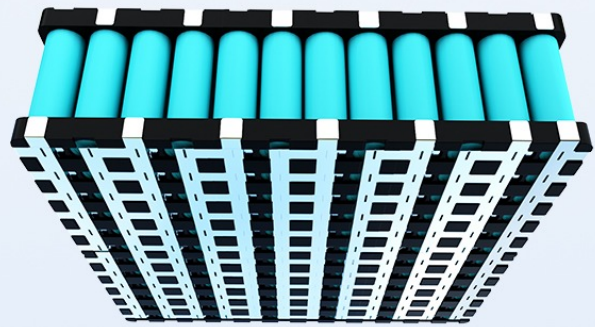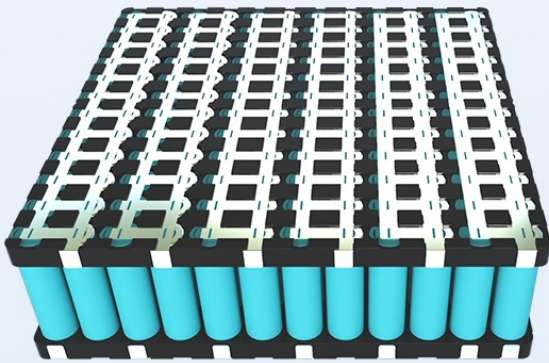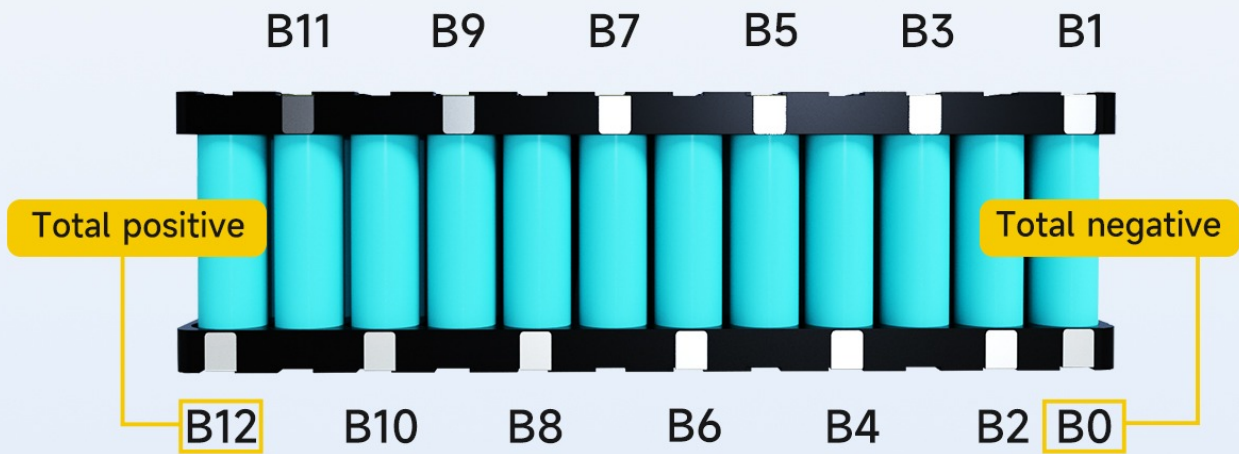

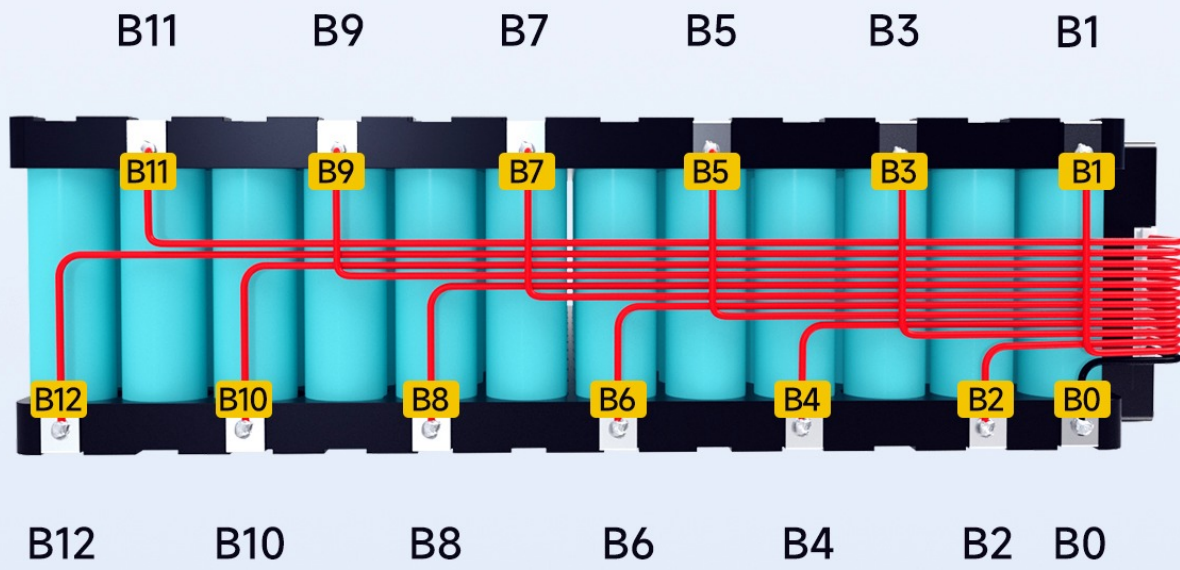

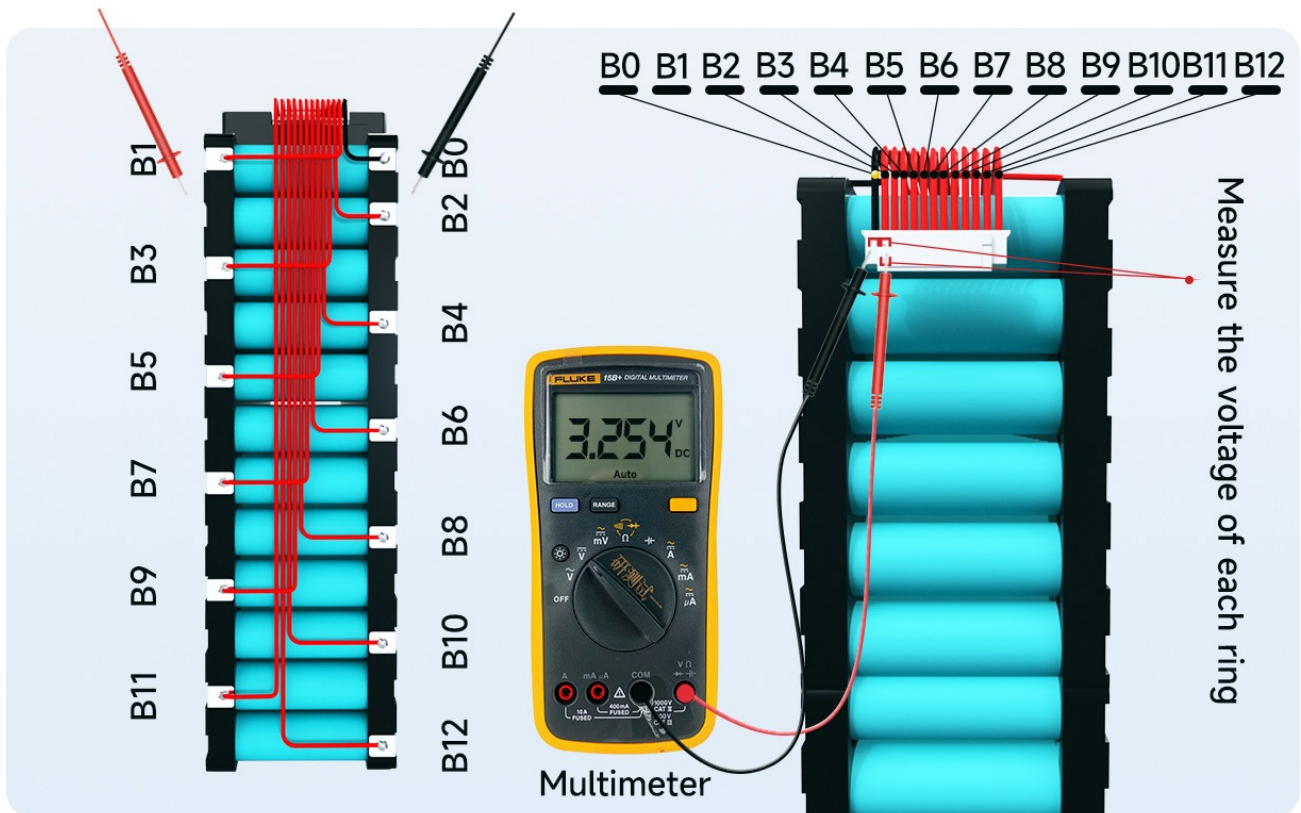

▲ Battery pack voltage

B0、B1

B1、B2

=

=

=

.....

=

B11、B12

▲ Cable voltage

B0、B1

B1、B2

B11、B12



